


## Mechanical Pump Details and procedures for extending / retracting Walings

### Introduction

It is advisable before commencing installation to read the notes below to become familiar with the procedures involved. The diagram below shows the pump control lever, gauge, hose connections and safety lock-off valve referred to in the procedures.

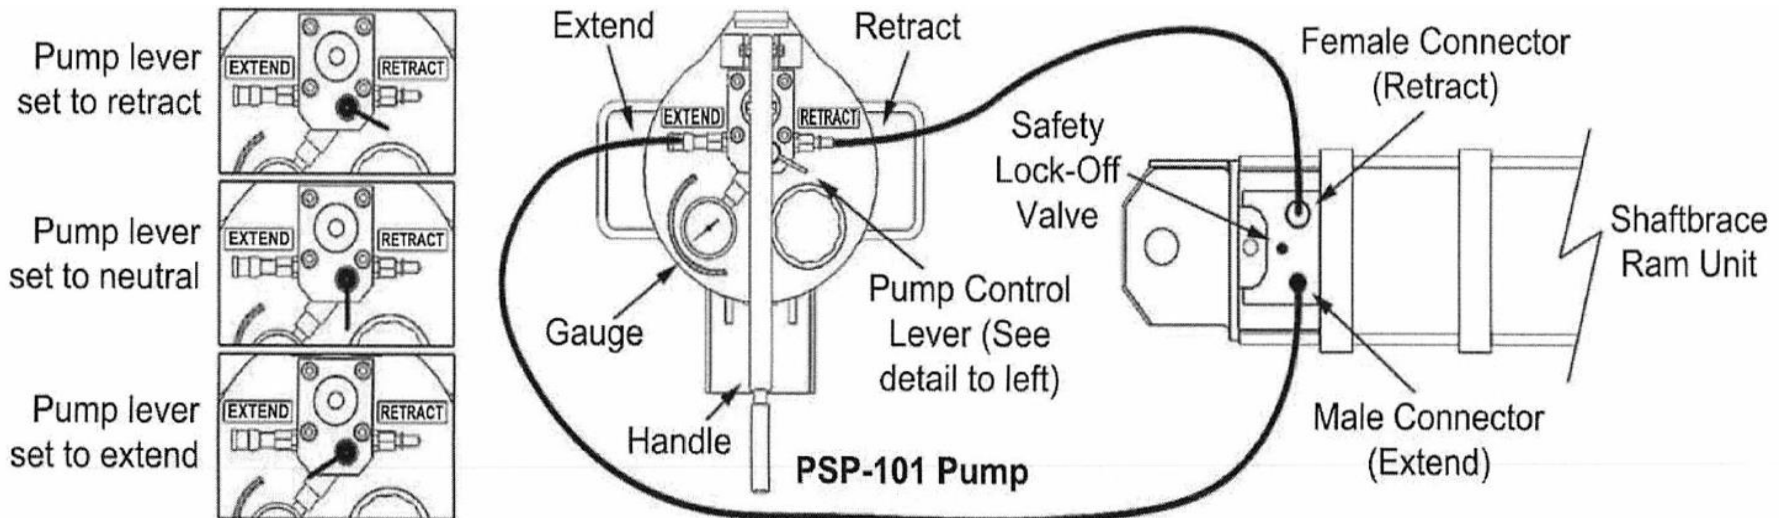

### Preliminaries

- Check there is sufficient of the correct shoring fluid in the tank.
- Set the pump control lever to "Neutral".
- Purge the hoses of air. To do this connect the hoses together and the pump for several strokes with the pump control lever set to "extend". When satisfied that any air has been expelled, set the pump control valve to "neutral".